

INSTRUCTION MANUAL

SCARY EASY!!

JOIN
THE
TRIBE

VOODOO LINER®



Materials needed for preparation of truck bed



Acetone



Sandpaper



Put down layers of Voodooliner to any thickness by applying multiple coats for added protection or cushion desired!

Easy water clean-up

Contents: Water-based Paint (Do Not Freeze)

Caution: Avoid eye and skin contact. May cause eye and skin irritation.

Before using this product read the Material Safety Data sheet inside.

NOTE: This product is a waterborne emulsion and under normal operating conditions presents minimal risk of fire or explosion. However, proper handling and use practices should be used at all times.


VOC CONTENT: Material VOC = 0.18 lbs/gal, 22 g/l /coating VOC = 0.28 lbs/gal, 33g/l. Not regulated by D.O.T. as a hazardous material per title 49 code of Federal Regulations. This product does not contain reportable levels of suspected carcinogens per the following sources OSHA, NTP and CAL-OSHA

4 Litre Volume Coverage Rate

4 ltr covers *approx 12sqm
Two coats are recommended for normal truck bed use, 3 or more coats for heavy duty industrial use

*Coverage will vary depending on method of application. The coverage listed here is based on rolling/brushing on. Spraying will lay-down thicker coating.

8ft long surface area (including sides, front & tail gate)

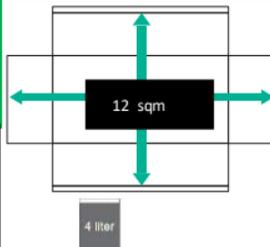

Easy to Apply:

Roll & Brush Application

For Best Results Use:

¼ nap Micro Fiber Rollers
& Regular House Paint Brushes



Spray Application

Available with Voodooliner DIY kit,
Voodooliner spray gun specifically
designed for the perfect textured finish.

(see website for more information)

PREPARATION OF SURFACE (Including any painted metals and fiberglass surface)

1. The surface must be clean, dry and free of oil & dirt.
2. Wash with warm water and soap and rinse with high pressure nozzle.
3. Scuff the surface down using recommended 40-80 grit sandpaper. Scuff the shine down to a dull matte finish. **(There's no need to sand down to bare metal, light sanding is also recommended).**
4. After scuffing, wipe off the sanded white powder with a clean all areas with rag & acetone.

NOTE: Voodooliner will not bond to oil, grease or powder.



MASK ALL AREAS NOT TO BE COATED

Ensure all surrounding areas are covered to avoid overspray during spraying.

5. Tape along all areas, accordingly, ensure all areas not to be coated are covered with masking tape correctly. If needed use a shape knife to cut out or around badges, screws so on.
6. Tape a 12" masking paper along taped areas ensuring all areas not to be coated are well covered.
7. Place drop-sheets on floor and or painters' plastic over all rest of the vehicle or other areas.
(This will prevent possible overspray on any exposed areas around main spraying areas.)
8. Clean surrounding area for safe work area during Voodooliner application.



APPLYING VOODOOLINER RX COATING (Using a Paint Brush & Roller)



For best results, use:
1/4" nap micro fiber rollers &
regular house paint brushes



Shake or mix the
container to mix
any settling of
material before any
application

1. Use undiluted and apply onto the prepared surface. Two coats is recommended for normal surface use. Apply unlimited, additional coats for heavy duty use. Each coat must be touch dry between coats.
2. Apply a spot metal etch primer to exposed metal areas.
3. Putting down your first coat evenly to all surfaces.
4. Allow the 1st coat to dry to the touch before applying additional coats. Depending on temperature and humidity, allow (15-30) mins in 15c° up



1/4" Nap micro roller

NOTE: Do Not apply material on too thick per coat in direct sunlight or cracking will occur. Allow each coat to dry to the touch before additional coats.

Do Not Apply below 10c° or 50 f temperature



Regular house paint brush

WARNING: KEEP OUT OF REACH OF CHILDREN.

Using a Paint Brush & Roller Properly

1. Start by coating seams and corners of surface using a 2" household paint brush (not provided). Lightly dab VOODOOLINER on rather than brushing it on like paint. Start with a light first coat, being careful not to let VOODOOLINER clump or run. Coat all areas in the same manner.
2. Use the 2" brush to apply to corners and areas where the roller won't reach. Dab the coating on rather than brushing it on. This will give you a more even surface application. You can later touch up with the brush later on. If needed light sand to smooth built up areas.
3. After you have completed sealing the seams and corners, begin to brush VOODOOLINER on front and side panels of surface with a roller.
4. Coating the tailgate using step 1-3. NOTE: In some applications it might be helpful to dab VOODOOLINER into the lower parts of the floor and tailgate slats with the paint brush and then roll the VOODOOLINER onto the top part. Be careful to watch for clumping. Occasionally stir VOODOOLINER to keep it from clumping.
5. After the first coat has been applied to the surface, allow VOODOOLINER to set up (approximately 1-4 hours or when it is no longer tacky). Make sure to apply the second coat only when 1st coat is 100% touch dry or between applications. **NOTE: TWO COATS OF VOODOOLINER ARE REQUIRED FOR ADEQUATE COVERAGE.** (Failure to apply two complete uniform coats will compromise the durability and reduce the life of the VOODOOLINER coating.) Use new roller to apply second coat.



Using Paint Brush & Roller Properly (Continue)

6. Repeat the application process for the second coat (steps 1-5).
7. After second coat is dry to the touch, check for any missed spots and touch up.
8. Install any removed hardware only once coating is completely cured.
9. The surface will be ready for light use in 24 hours. Allow 72 hours for full curing.
10. Clean all tools using water before VOODOOLINER has dried.



Using VOODOOLINER RX with Voodoo Liner Spray Guns



- Connect to an air compressor with a pressure of 40-80 PSI. (Higher pressure will provide a smoother finish.) Before starting the job, test spray the gun away from truck bed to become familiar with the spray pattern and coverage.



For small projects.



For mid-size projects.



For large projects.

Ideal for
continuous
airflow
application

APPLYING VOODOOLINER RX COATING (Using Spray Guns)



For Best results apply by Voodoo Liner spray gun

Application.

1. Use Voodoo Liner undiluted and apply onto the prepared surface. Two coats are recommended for normal truck bed use. Apply unlimited, additional coats for heavy duty use.
2. Putting down your first coat smoothly and evenly to all surfaces. Ensure your gun is approx. 12inh away from coating surface.
3. Allow the 1st coat to dry to the touch before applying additional coats. Depending on temperature and humidity, allow (10 -15) mins in 15c° up

NOTE: Do Not apply material on too thick per coat in direct sunlight or cracking will occur. Allow 1st coat to dry to the touch before additional coats. (Spray between 40-60 psi using the Voodoo Liner spray gun)

Do Not Apply below 10c° or 50f temperature



Shake or mix the container to mix any settling of material before any application.



Using Voodoo Liner Spray Gun Cont.)

3. When surface becomes touch dry, spray apply second coat evenly to all surfaces. Extreme climatic conditions of humidity and cold will slow drying down, first coat must be dry to the touch before additional coats are applied.

5. The more time between the final coat of VOODOOLINER and additional topcoat, the quicker VOODOOLINER will harden. For best adhesion, apply additional coats to VOODOOLINER surface within 24 hours.

NOTE: TWO COATS OF VOODOOLINER ARE REQUIRED FOR ADEQUATE COVERAGE.

6. After second coat is dry to the touch, check for any missed spots and touch up.

7. After second coat is touch dry apply 3rd coat if required to all surfaces.

8. Full curing of Voodoo liner depends of weather conditions, heat, humidity during and after application. Ideally apply Voodoo Liner in control conditions where you can ensure suitable curing conditions,

9. After Voodoo Liner is completely touch dry, allow curing in direct sunlight to help full curing. Full curing can take up to 72 hours after application.

10. Clean all tools using water before VOODOOLINER has dried.



PRECAUTIONS

Avoid contact with skin and eyes. Can cause irritation. AVOID BREATHING VAPOR. USE IN A **WELL-VENTILATED AREA**. May cause coughing and lung irritation, headache, dizziness, nausea. Harmful or fatal if swallowed. If swallowed, contact doctor or poison control center. Do not induce vomiting. Give a glass of water. If skin contact occurs, wipe clean with Xylene (Xylol) before VOODOOLINER dries. Remove contaminated clothing and wash skin thoroughly with soap and water. **WARNING: KEEP OUT OF REACH OF CHILDREN**

WARNING

Even though Voodoo Liner is user friendly, It is always recommended to use suitable safety equipment at all times.



SCARY EASY
DIY



VOODOO LINER



SCARY EASY
Real Brush or Spray
Truck Bedliner Coating

VOODOO LINER
SCARY EASY
Dirt
Res. Scratch
or Rain-Can
Truck Bedliner Coating
JUN
THE REP